

What to do if...

What to do if...



A tire punctures.

P. 620 If you have a flat tire



The hybrid system does not start.

P. 628 If the hybrid system will not start

P. 117 Immobilizer system

P. 637 If the 12-volt battery is discharged



The shift lever cannot be moved out.

P. 630 If the shift lever cannot be shifted from "P"



The high coolant temperature warning light comes on.

P. 640 If your vehicle overheats



Steam can be seen coming from under the hood.



The key is lost.

P. 633 If you lose your keys



The 12-volt battery runs out.

P. 637 If the 12-volt battery is discharged



The doors cannot be locked.

P. 62 Doors



The horn begins to sound.

P. 119 Alarm



The vehicle is stuck in mud or sand.

P. 644 If the vehicle becomes stuck



A warning light or indicator light comes on.

P. 608

If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light (red indicator)

or



P. 608



Malfunction indicator lamp

or



P. 609



"ABS" warning light

or



P. 609



Driver's seat belt reminder light

P. 610



Front passenger's seat belt reminder light

P. 610



Brake system warning light (yellow indicator)

P. 609



High coolant temperature warning light

P. 610



Low fuel level warning light

P. 610



Master warning light with warning message

P. 610



SRS warning light

P. 609



Electric power steering warning light

P. 609



Open door warning light

P. 610



Pre-collision system warning light

P. 609



Charging system warning light

P. 608



Tire pressure warning light

P. 610